



Simply relocate the pin from slot 3 to slot 14.

First release the latches on either side of the connector so the pin can be removed

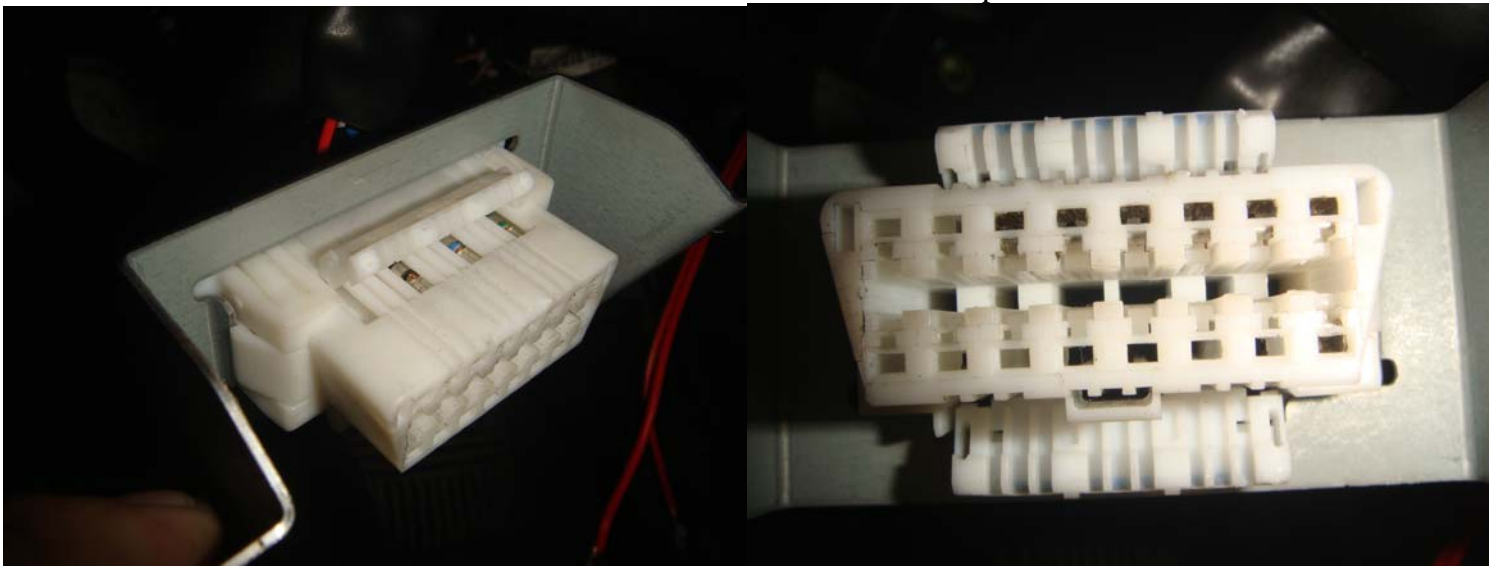

Use a pick or other pointed tool to bend back the retaining clip in the center of the connector so the pin can be slid out.

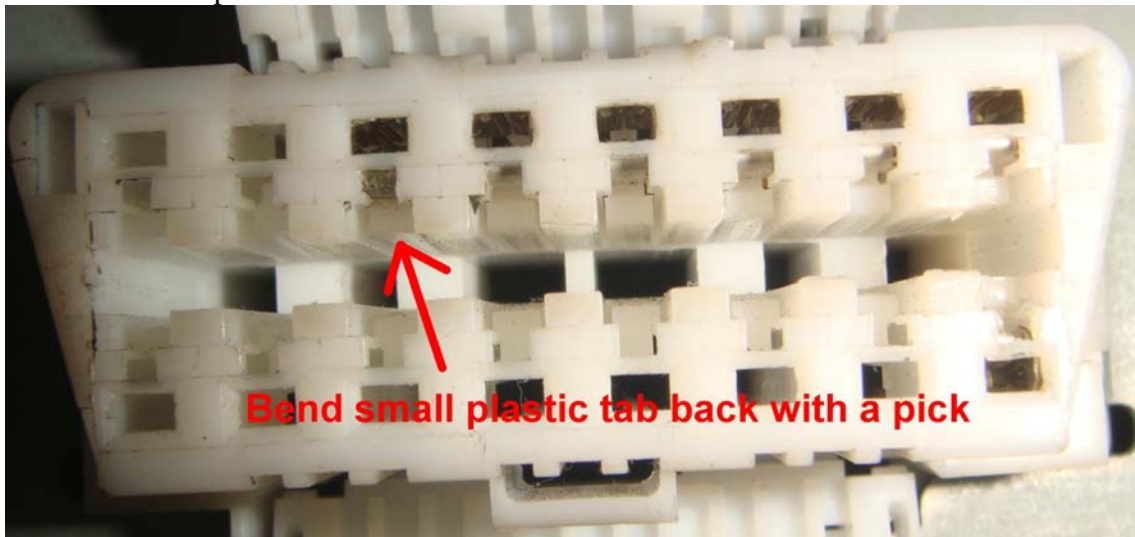

Remove the pin from position 3 and relocate it to position 14.

